




Chromebook Soft Reset

1. Power off the Chromebook.
2. Hold down the refresh button and then tap the power button
3. Once the Chromebook powers on you can let go of the refresh button.

Reset your Chromebook



On your Chromebook's keyboard, press and hold **Refresh**  and tap **Power** . When your Chromebook starts up, release **Refresh** .
