
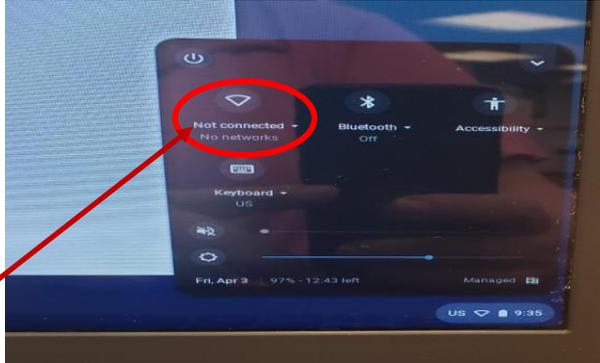


Connecting Your Chromebook to the WiFi

Before you try to connect, be sure you are in range of a wireless access point and that your wireless card is enabled.

On the bottom right hand side of the desktop, click the status bar.

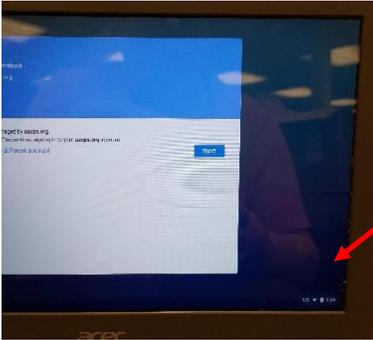

If the wireless card turned off:

To turn on wireless, click Turn WiFi on


The system will search for wireless networks in range then display ones found after a few seconds.

Click the network name you wish to join.

If the WiFi network is password protected, Chrome will prompt you to enter your WiFi password.



To share the WiFi password with other users' accounts on your Chromebook automatically, check the box to 'Share this network with other users'.

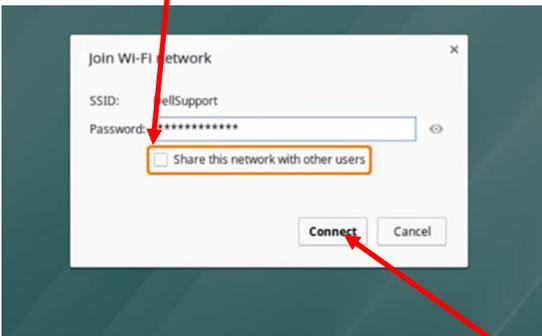


Once the password is entered, click Connect and the system will connect to your router.


Note: Sometimes if you change your password or try to connect to a router with a similar name, you'll have trouble establishing a wireless connection. To fix this, you can forget previously remembered networks.

How to Forget a WiFi Connection:


Click the status bar and then click WiFi

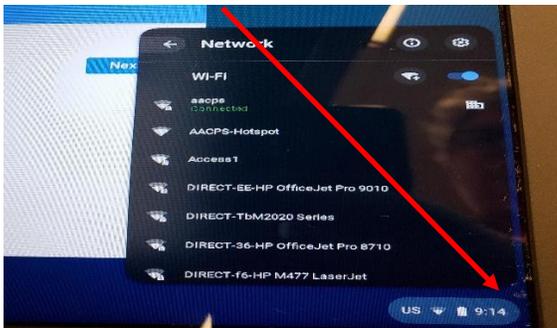

Click the dropdown beside the wireless symbol and then click preferred networks.

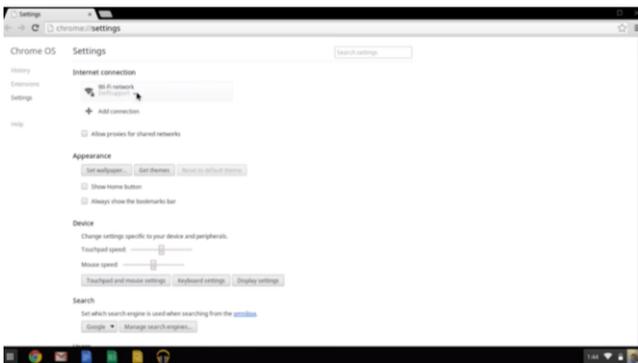

When you mouse over the wireless name, it will become highlighted and an X will appear to its right. Click the X to forget the account. Then, click done.

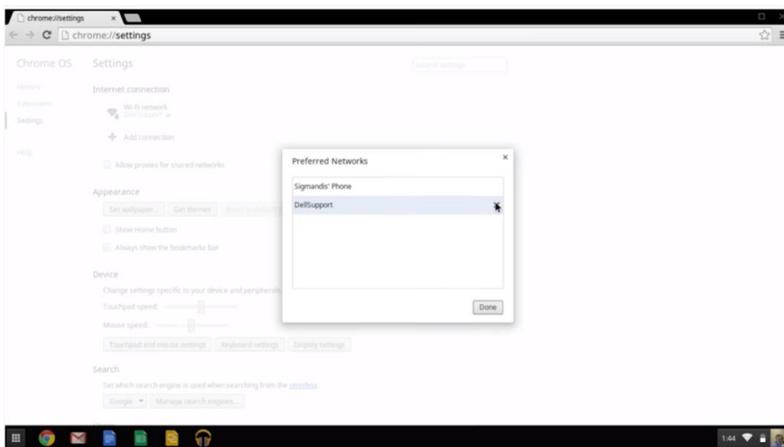

You should now be connected to your WiFi.